




IMPRESSA J7 – Quick Reference Guide

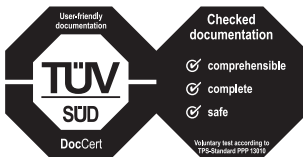

The 'IMPRESSA J7 Instructions for Use' together with these short instructions 'IMPRESSA J7 – Quick Reference Guide' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.



These short instructions do not replace the ‘IMPRESSA J7 Instructions for Use’. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can initiate the rinse operation manually at any time.

Precondition: **READY** is displayed.

- ▶ Place a receptacle under the coffee spout.
- 🕒 ▶ Keep the Rotary Switch pressed **until RINSE** appears.
- 🕒 ▶ Press the Rotary Switch to enter the programme item. **RINSE**
- 🕒 ▶ Press the Rotary Switch to initiate the rinse operation. **RINSING**, water flows out of the coffee spout. Rinsing stops automatically and your IMPRESSA is then ready for use.




Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using CLARIS Blue filter cartridges.

- i** Perform the ‘Inserting the filter’ operation without interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: **READY** is displayed.

- 🕒 ▶ Keep the Rotary Switch pressed **until RINSE** appears on the display.
- 🕒 ▶ Turn the Rotary Switch until **FILTER –** is displayed.
- 🕒 ▶ Press the Rotary Switch to enter the programme item. **NO –**
- 🕒 ▶ Turn the Rotary Switch until **YES ✓** is displayed.
- 🕒 ▶ Press the Rotary Switch to confirm the setting. **OK** appears briefly on the display to confirm the setting. **INSERT**, the maintenance button **⚡** lights up.
- ▶ Remove the filter cartridge extension from the Welcome Pack.
- ▶ Fit the extension on top of an original CLARIS Blue filter cartridge.
- ▶ Remove and empty the water tank.

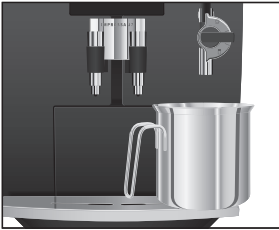

- ▶ Lift the cartridge holder and insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the cartridge holder. It will click into place audibly.

i After two months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the cartridge holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 500 ml) under the frother.

i If you are using the **Professional Cappuccino Frother**, set the selector switch of the frother to the steam position ☽.

- ⚡ ▶ Press the maintenance button.

FILTER RINSING. Water flows out of the frother.

i You can interrupt rinsing of the filter at any time by pressing the maintenance button ⚡.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 500 ml. **HEATING** appears on the display, then **READY** is displayed. The filter is now activated.

Changing the filter

i After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.

i After two months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the cartridge holder in the water tank.

i If the CLARIS Blue filter cartridge is not activated, you will not be prompted to change the filter.


Proceed as follows to change the CLARIS Blue filter cartridge when prompted to do so by your IMPRESSA.

Precondition: **READY / FILTER** is displayed and the maintenance button  lights up.


- ▶ Press the maintenance button.

CHANGE

- ▶ Remove and empty the water tank.
- ▶ Lift the cartridge holder.
- ▶ Take out the old filter cartridge and the extension.
- ▶ Fit the extension on top of a new filter cartridge.
- ▶ Insert the filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the cartridge holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

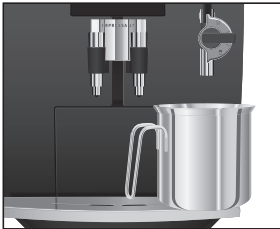


- ▶ Place a receptacle (at least 500 ml) under the frother.

i If you are using the **Professional Cappuccino Frother**, set the selector switch of the frother to the steam position .

- ▶ Press the maintenance button.

FILTER RINSING, water will flow out of the frother.

i You can interrupt rinsing of the filter at any time. To this purpose press the maintenance button .

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 500 ml. The IMPRESSA heats up and is once more ready for use.



Rinsing the cappuccino frother



- i** This chapter applies to the **Professional** and **Easy Cappuccino Frothers**.

To ensure that the cappuccino frother works perfectly, you should rinse it with water **after every** milk preparation. Your IMPRESSA will **not** prompt you to rinse the cappuccino frother.

Precondition: **READY** is displayed.

- ▶ Remove the milk pipe from the milk carton/bottle or the milk container.
 - ▶ Fill a receptacle with fresh water and immerse the milk pipe in it.
 - ▶ Place a receptacle under the cappuccino frother.
- i** If you are using the **Professional Cappuccino Frother**, turn the selector switch to the milk foam  or milk  position.

-  ▶ Touch the Steam symbol.

HEATING

As soon as the machine has heated up, **READY** appears.

-  ▶ Touch the Steam symbol again.

STEAM, the frother and milk pipe are rinsed.

- START** ▶ Touch the Start symbol as soon as clean water flows out of the frother.
The operation stops and your IMPRESSA is once more ready for use.

Cleaning the cappuccino frother

- i** This chapter applies to the **Professional** and **Easy Cappuccino Frothers**.

To ensure that the cappuccino frother works perfectly, you should clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the cappuccino frother.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.



- ▶ Use only original JURA maintenance products.

- i** JURA Cappuccino Cleaner is available from stockists.

Precondition: **READY** is displayed.

- ▶ Remove the milk pipe from the milk carton/bottle or the milk container.
- ▶ Pour 250 ml of fresh water into a receptacle and add one capful (max. 15 ml) of Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Place another receptacle under the frother.



i If you are using the **Professional Cappuccino Frother**, turn the selector switch to the milk foam  or milk  position.

 ▶ Touch the Steam symbol.

HEATING

As soon as the machine has heated up, **READY** appears.

 ▶ Touch the Steam symbol again.

STEAM, the frother and milk pipe are cleaned.

START ▶ Touch the Start symbol as soon as the receptacle containing the Cappuccino Cleaner is empty.

▶ Rinse the receptacle thoroughly, fill it with approx. 250 ml of fresh water and immerse the milk pipe in the water.

▶ Empty the other receptacle and place it under the frother once more.

 ▶ Touch the Steam symbol.


STEAM, the frother and milk pipe are rinsed with fresh water.

START ▶ Touch the Start symbol as soon as the receptacle containing the water is empty.

The operation stops and your IMPRESSA is once more ready for use.




Dismantling and rinsing the Professional Cappuccino Frother

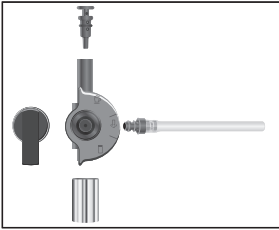

- ▶ Carefully remove the frother from the Connector System® by twisting slightly.
- ▶ Dismantle the frother completely.
- ▶ Rinse all frother parts thoroughly under running water.
- ▶ Re-assemble the frother.

- i** Ensure that all individual parts are correctly and firmly connected to ensure correct operation of the frother
- ▶ Firmly attach the frother to the Connector System®.

Dismantling and rinsing the Easy Cappuccino Frother

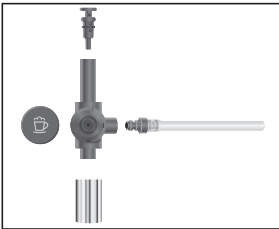

- ▶ Carefully remove the frother from the Connector System® by twisting slightly.
- ▶ Dismantle the frother completely.
- ▶ Rinse all frother parts thoroughly under running water.
- ▶ Re-assemble the frother.

- i** Ensure that all individual parts are correctly and firmly connected to ensure correct operation of the frother.
- ▶ Firmly attach the frother to the Connector System®.

Cleaning the machine


After 200 coffee preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme only lasts about 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from stockists.

Precondition: **READY / CLEAN** is displayed and the maintenance button  lights up.

- ▶ Press the maintenance button.

EMPTY TRAY

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

PRESS RINSE, the maintenance button  lights up.

- ▶ Place a receptacle under the coffee spout.

- ▶ Press the maintenance button.

CLEANING, water flows out of the coffee spout.

The operation is interrupted, **ADD TABLET**.

- ▶ Open the cover of the filler funnel for pre-ground coffee.



- ▶ Insert a JURA cleaning tablet into the filler funnel.

- ▶ Close the cover of the filler funnel.

PRESS RINSE, the maintenance button  lights up.

- ▶ Press the maintenance button.

CLEANING, water flows out of the coffee spout several times.

The operation is interrupted, **EMPTY TRAY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

The cleaning operation is now complete. The IMPRESSA is once more ready for use.

Descaling the machine



CAUTION

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the degree of hardness of your water.

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
 - ▶ If descaling agent does come into contact with the skin or eyes, rinse off with clean water. Should you get any descaling agent in your eye, see a doctor.
-

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA maintenance products.
-

CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.
-


CAUTION



If the descaling agent comes into contact with sensitive surfaces, damage cannot be ruled out.



- ▶ Clean up any splashes immediately.
-

- i** The descaling programme lasts approx. 45 minutes.
- i** JURA descaling tablets are available from stockists.
- i** If you use a CLARIS Blue filter cartridge and this is activated, you will not be prompted to descale.

Precondition: **READY / DE-SCALE** is displayed and the maintenance button  lights up.

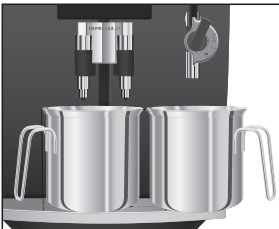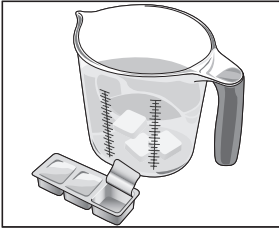-  ▶ Press the maintenance button.
- EMPTY TRAY**
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- AGENT IN TANK**
- ▶ Remove and empty the water tank.



- ▶ Completely dissolve the contents of one blister (three JURA descaling tablets) in a container that holds 500 ml of water. This may take several minutes.
 - ▶ Pour the solution into the empty water tank and insert it in the machine.
 - ▶ **AGENT IN TANK**, the maintenance button  lights up.
 - ▶ Remove the cappuccino frother from the Connector System[®].
 - ▶ Place a receptacle (at least 500 ml) under the Connector System[®].
 - ▶ Press the maintenance button.
 - ▶ **DE-SCALING**
This causes water to flow out of the Connector System[®] several times. The maintenance button blinks during the descaling operation.
The operation stops automatically, **EMPTY TRAY**.
 - ▶ Empty the receptacle under the Connector System[®].
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
 - ▶ **FILL WATER TANK**
 - ▶ Remove the water tank and rinse it thoroughly.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
 - ▶ **PRESS RINSE**, the maintenance button  lights up.
 - ▶ Replace the cappuccino frother.
 - ▶ Place a receptacle under the frother and another under the coffee spout.
 - ▶ Press the maintenance button.
 - ▶ **DE-SCALING**, water flows out of the frother and the coffee spout.
The operation stops automatically, **EMPTY TRAY**.
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The descaling operation is now complete. Your IMPRESSA heats up and is once more ready for use.
- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

